




Display is Blank/No Power

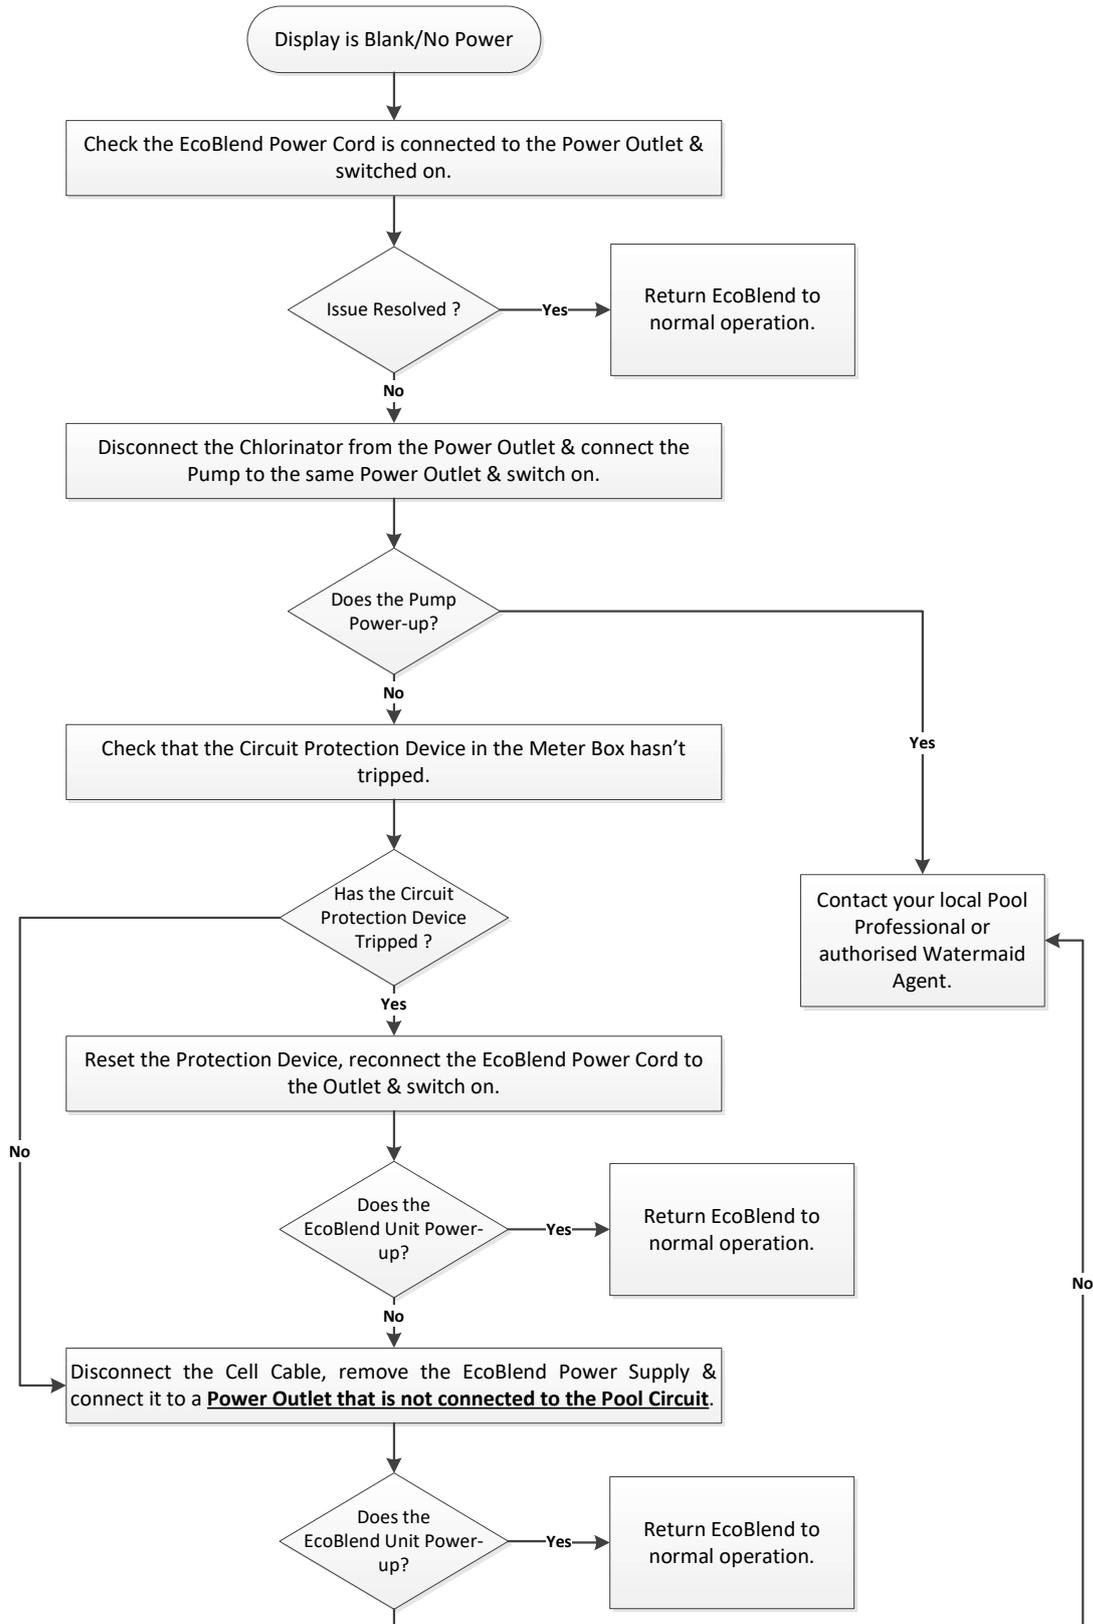


Low-Salt LED Flashing

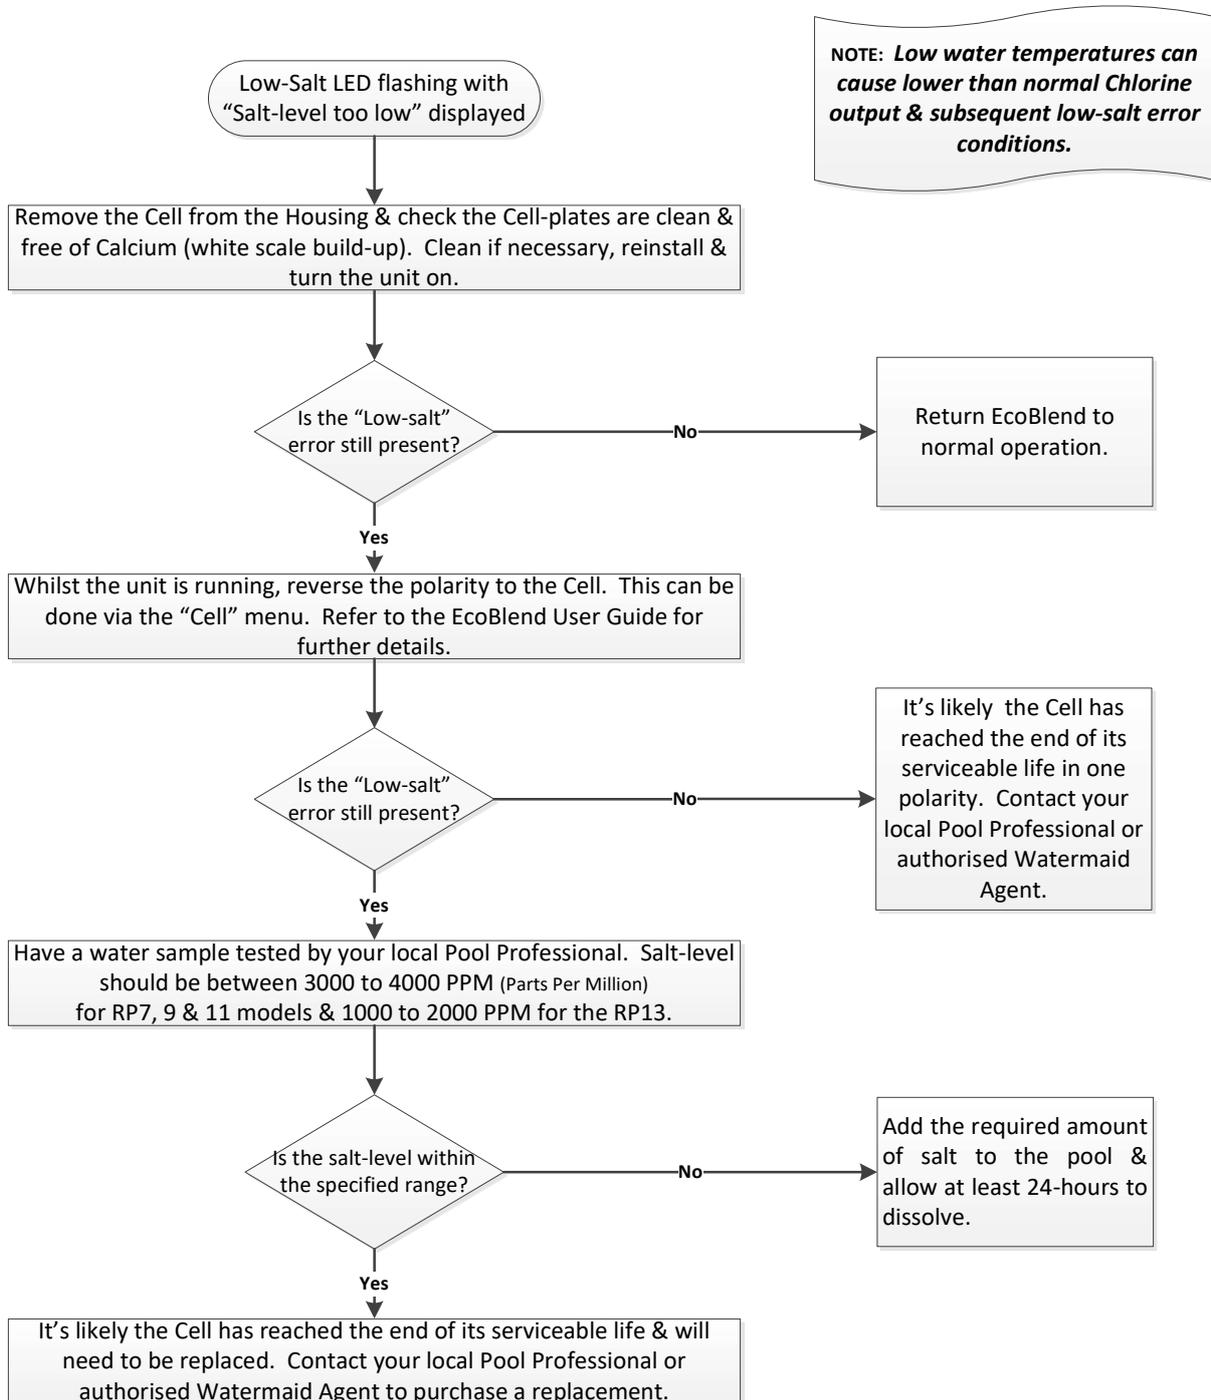


High-Salt LED Flashing

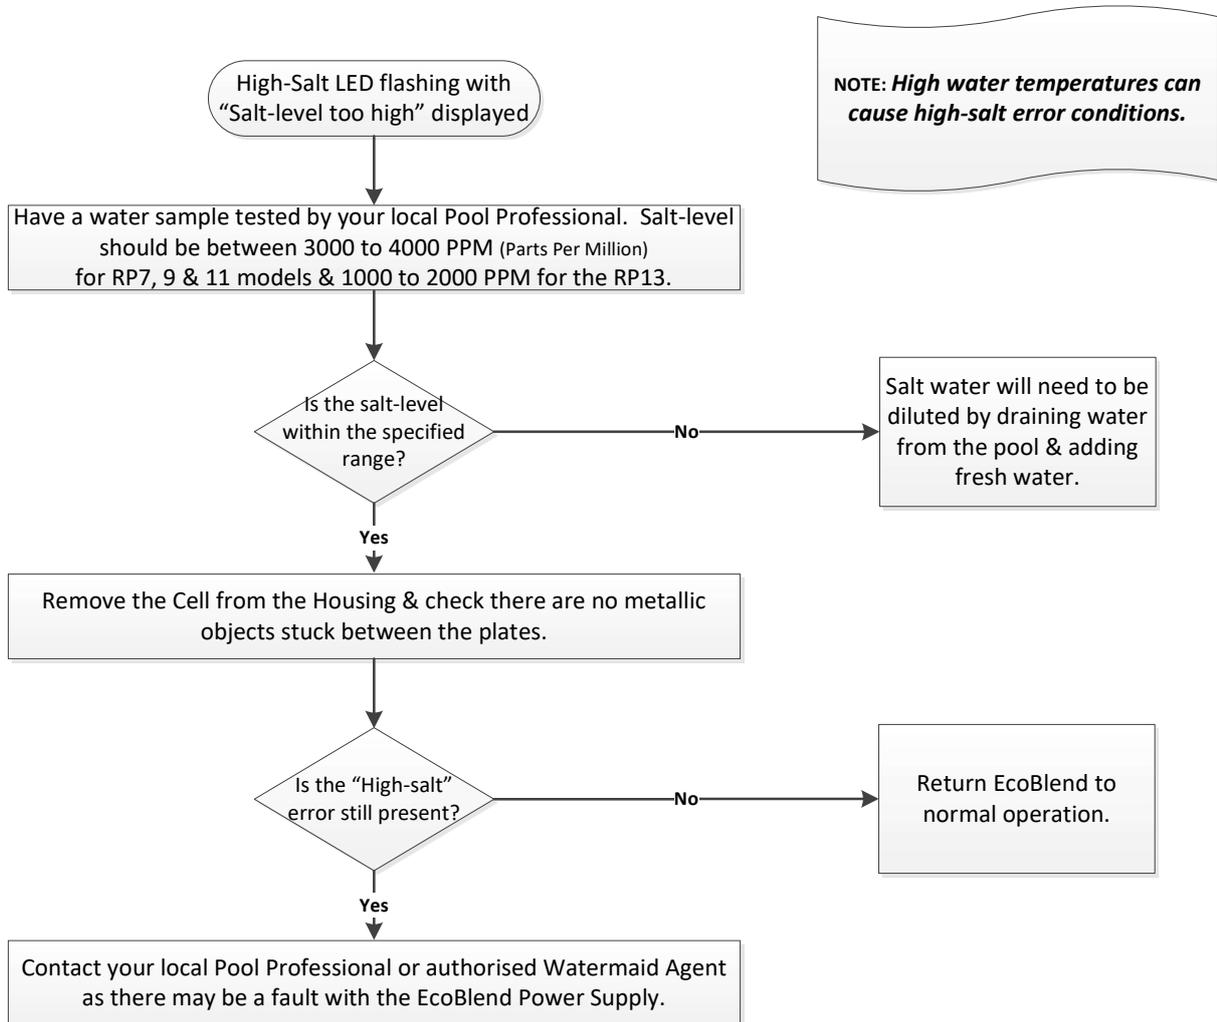


Unable To Achieve 100% Output

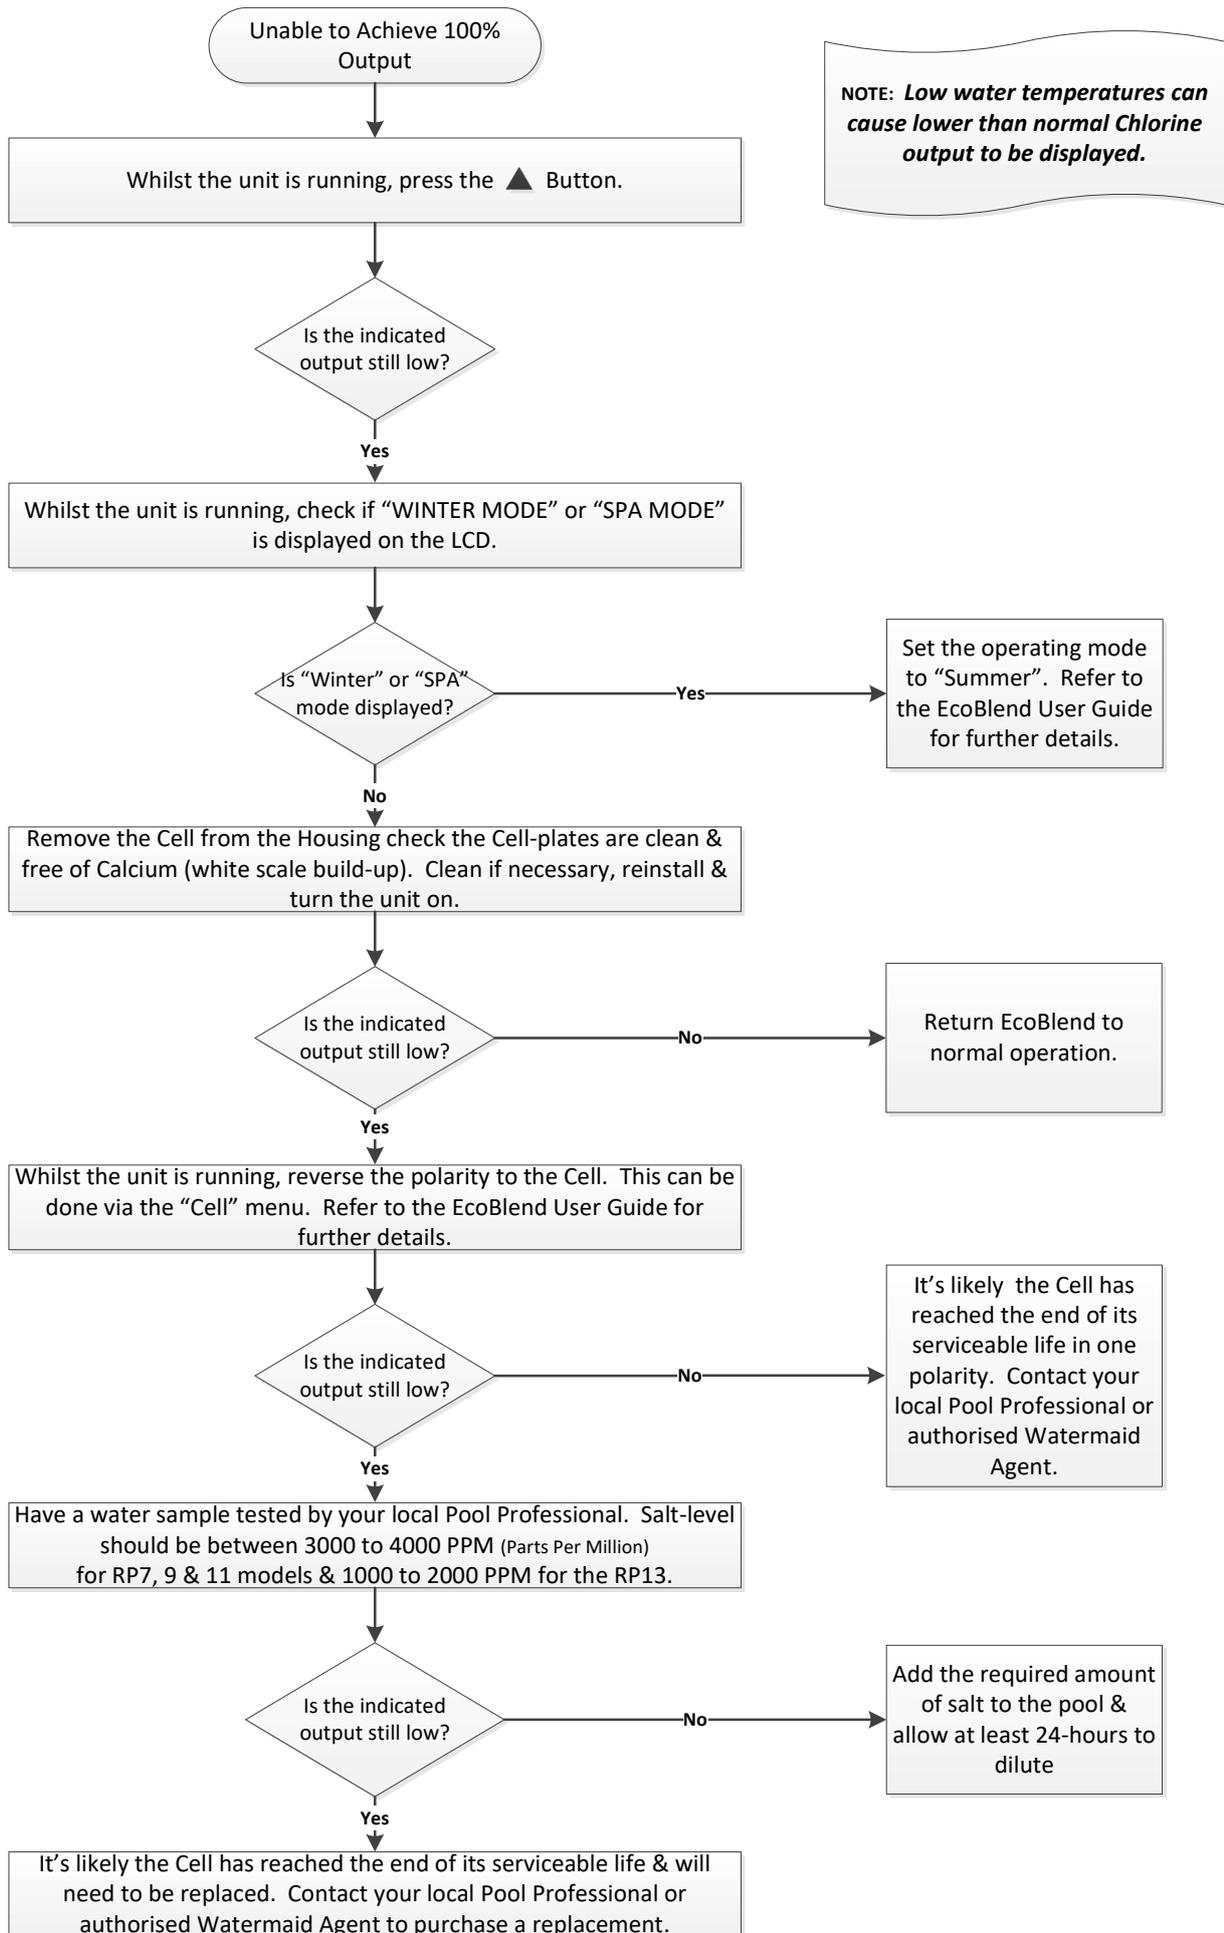

Chlorinator Running Outside Pre-set Timer Windows

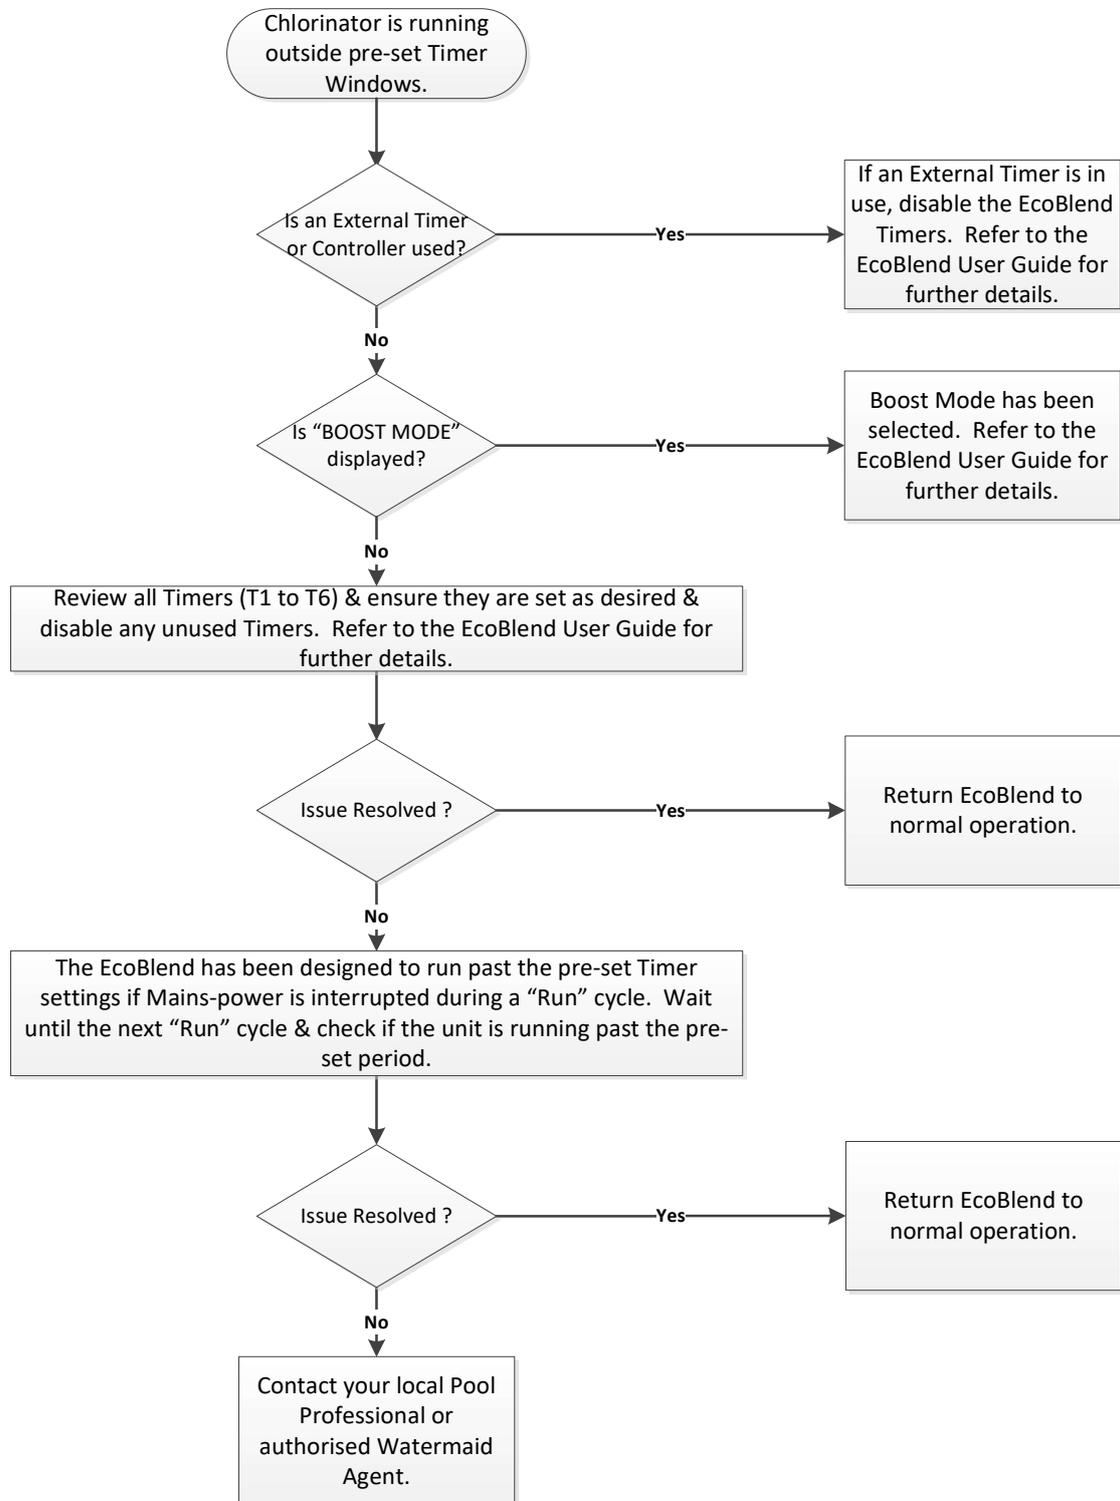


Water-flow LED Flashing

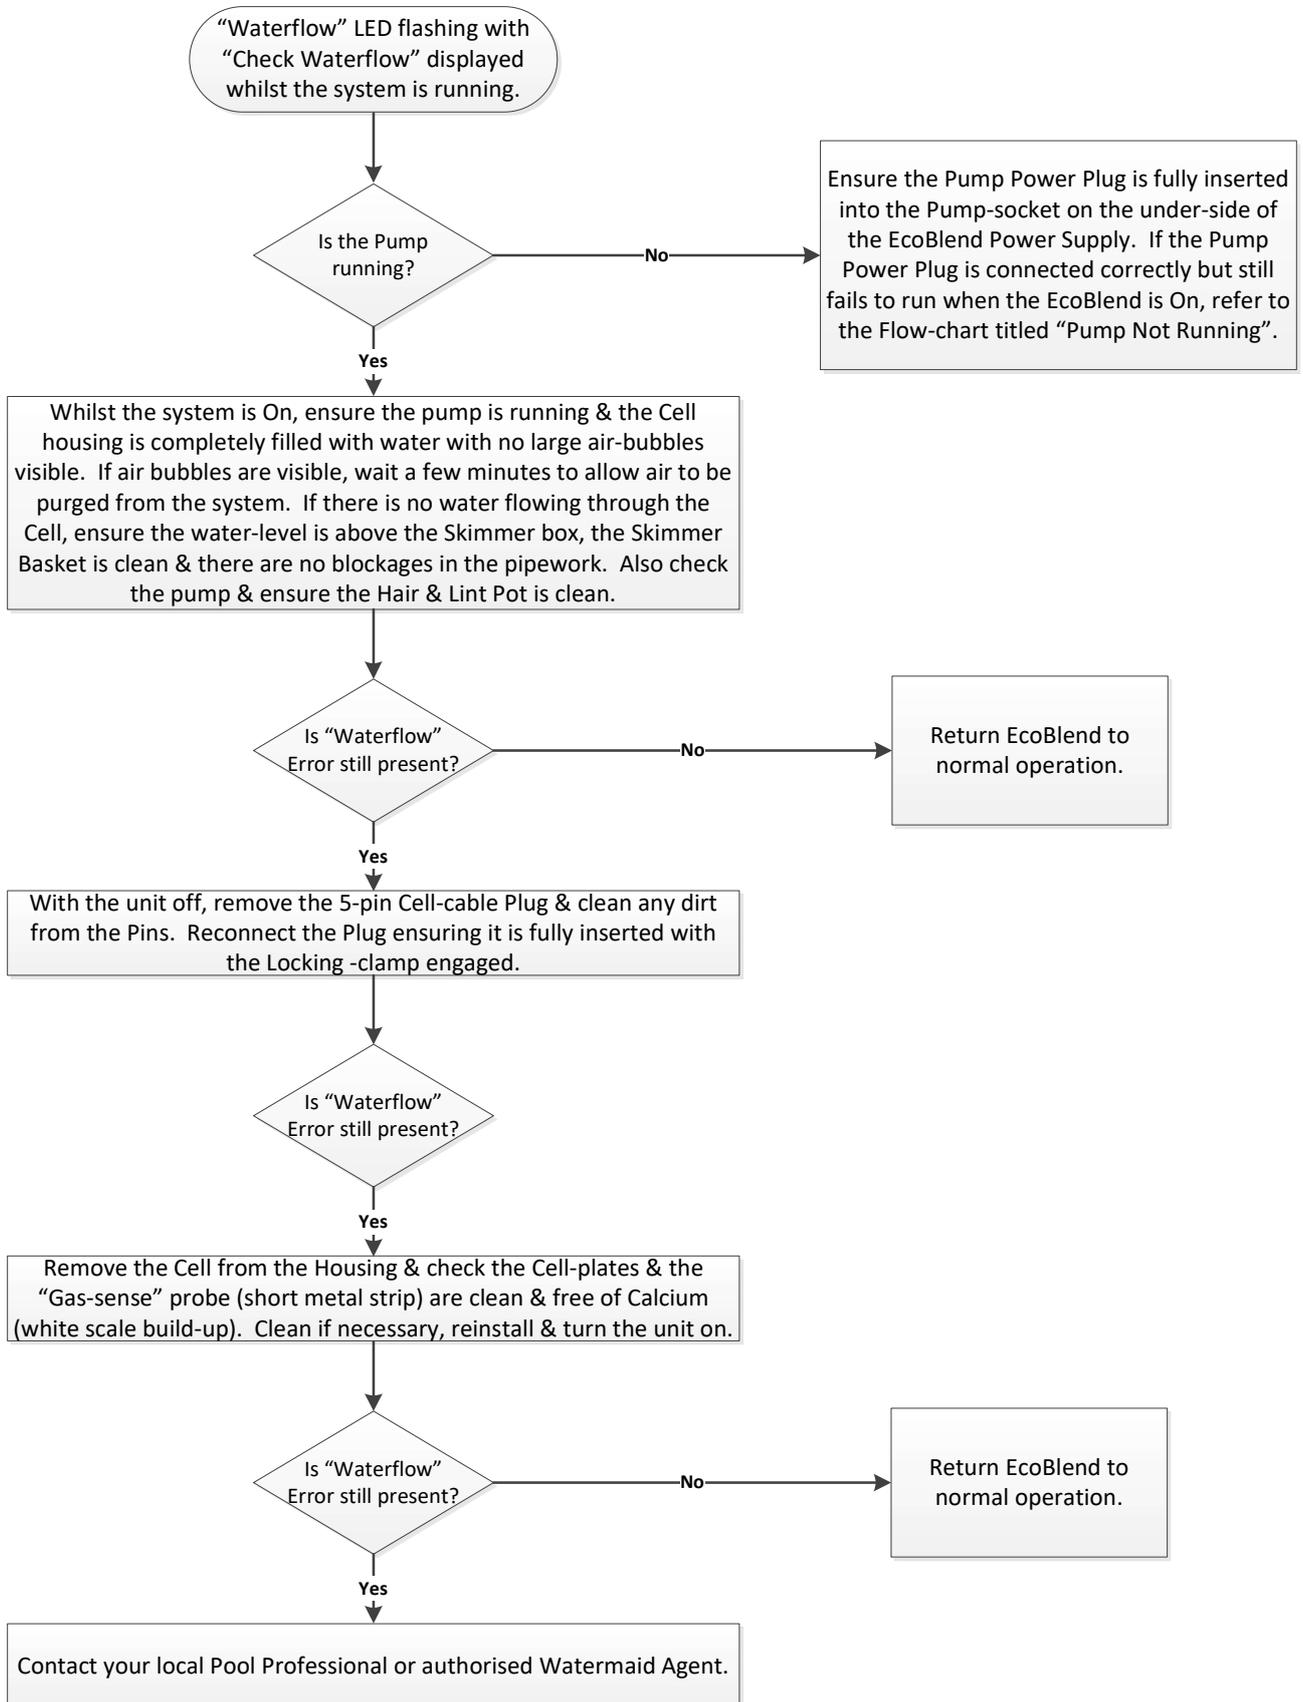

Pump Not Running When EcoBlend is On

NOTE: If the "Pump Protection" feature is enabled, power to the pump will be cut if there is no water-flow detected. Turn the EcoBlend Power Supply off & then on again and check the water-flow through the Cell housing. Power to the pump will be cut again if water-flow is impeded.

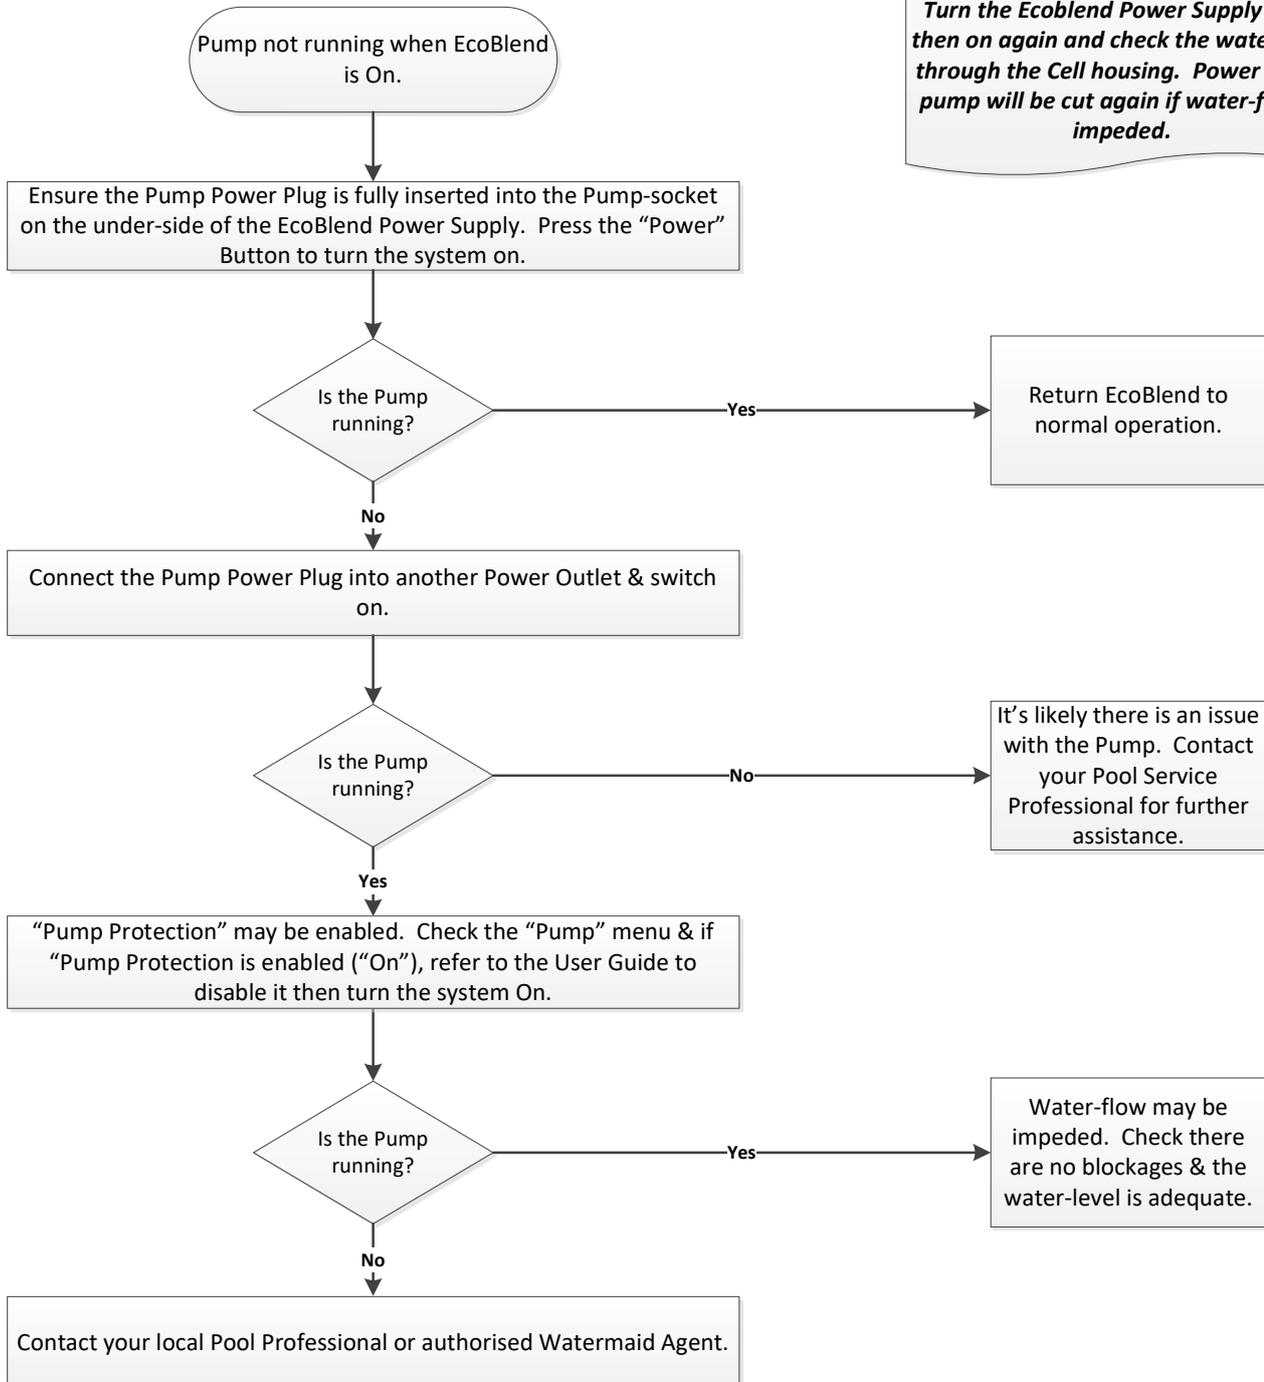

Only The Blue "0" Percentage LED is On

