

INSTALLATION INSTRUCTIONS

The "Quietline" Pump has been designed to work with a variety of filter types including Sand, Cartridge and Diatomaceous Earth.

The installation of the Quietline Pump should be carried out by an experienced Pool Plumbing, Pump and Filter Installer.

LOCATION

1. Install at a distance no more than 12 metres from the Pool or Spa and no more than 1 metre above water level or 1 metre below water level. If the pool is to be installed outside these parameters, seek the advice of your local Poolrite Distributor.
2. The Pump should be placed on a secure and level concrete or similar base 600 x 300mm in size (Pump only) and should be placed in a location that cannot be flooded by storm water or by accidental immersion.
3. The rear of the Motor should be no closer than 150mm from a wall, fence or any other barrier to allow for adequate airflow to cool the Motor.

PIPE CONNECTION

4. The Suction and Discharge Ports are provided with Union Adaptors for quick disconnection. These connectors will accept either 40mm or 50mm PVC pipe and should be joined to the pipe with PVC Solvent Cement. Suction lines should be no smaller than as follows:-

| Pump Model | Max Suction Line Length | Min. PVC pipe size |
|------------|-------------------------|--------------------|
| SQI 400 | 12m | 50mm |
| SQI 500 | 12m | 50mm |
| SQI 600 | 12m | 50mm |
| SQI 700 | 12m | 2 x 50mm |

Discharge pipe should be no smaller than 40mm for Pump sizes SQI 400, SQI 500 and SQI 600. Pump SQI 700 should use 50mm pipe.

When installed below water level, Shut-off Valves should be fitted to the Suction and Discharge Lines which should be free from air leaks. The discharge from the Pump Outlet should be connected to the Inlet of the Filter and the Suction Port connected to the Skimmer Box or Suction Outlet from the Pool or Spa.

WEATHER PROTECTION

5. The Quietline Pump is completely Weatherproof and therefore no enclosure is necessary. However should it be desirable to install the Pump in an enclosure, the enclosure must have both a ventilation inlet and outlet opening to allow cooling airflow around the Pump Motor. Each opening should be at least 200 sq cm in area as close as practicable to the Pump.

POWER CONNECTION

6. The Quietline Pump is designed to be connected to a nominal 240 volt 50Hz power supply and is supplied with a 1.8 metre lead and 3 Pin Plug. A Weatherproof 3 Pin Power Point should be fitted by an electrician in a dry place, shielded from pool water splash over.

EXTENSION LEADS ARE NOT RECOMMENDED FOR USE WITH THIS EQUIPMENT BECAUSE THEY ARE UNSAFE IN AND AROUND THE POOL ZONE.

OPERATING INSTRUCTIONS

STARTING PUMP

Before switching the pump ON check that all Pipework is properly sealed and that the pool water is at the recommended level (check with your Pool Builder).

1. First prime the Pump by removing the Clear Lid by loosening the Clamp Knobs and allowing them to swing aside.

Fill the Strainer Pot with water to the Suction Port. Replace the Lid ensuring that it is sealed on the Gasket properly. Do not overtighten the Clamp Knobs.
2. Connect to power supply and switch ON.
3. Allow Pump to run discharging the water back to the pool.
4. If flow is not established within approximately 1 minute, switch off the Pump and repeat procedure. Continued failure to prime may indicate an air leak in the suction line which should be rectified.

ROUTINE MAINTENANCE

The Strainer Basket should be inspected frequently through the Clear Lid and emptied as follows when a build-up of rubbish is evident.

1. Switch off Pump.
2. Remove Clear Lid.
3. Remove Strainer Basket.
4. Empty accumulated rubbish and hose Strainer Basket clean.
5. Replace Strainer Basket.
6. If Strainer Pot has emptied of water, repeat steps in "Starting the Pump".

WATER LEAKS

7. Water leaking from under the Pump and Motor should be attended to immediately as this would indicate a failure of the Pump Shaft Seal. If this seal is not immediately replaced damage may occur.
8. Pool water leaking onto the pump motor from associated plumbing should be attended to immediately before damage occurs.

MOTOR NOISE

9. If the Pump Motor starts to get "noisy" the Motor should be checked by a Pool Technician to ascertain whether the Motor Bearings need replacement. This should be attended to immediately as Bearing failure may cause Motor burn out.

LARGE AIR BUBBLES UNDER THE STRAINER POT LID

10. Check the Gasket under the Clear Lid and check the pipe connection to the Suction Port at the front of the Pump to make sure it is tight - do not overtighten.

CHEMICAL BALANCE GUIDE

11. The unit is designed to be used for Spa or Swimming Pool water, balanced in accordance with Langlier Saturation Index, with a pH level of 7.0 to 8.0 and is regularly treated with a chlorine Sanitising agent, the level not exceeding 3 PPM.

TROUBLE SHOOTING GUIDE

If the Pump and Motor runs but there is little or no water flow, the following conditions may apply:-

1. Check to see if the Filter needs cleaning or is blocked - refer to Filter Instruction Manual.
2. Pump is not primed - re-prime as per instructions in "Starting Pump".
3. Air leaks in suction lines - Check for air bubbles under Clear Lid and tighten. Check all pipes and connections and repair if necessary.
4. Water on ground under the Pump and Motor usually indicates a damaged Pump Shaft Seal - this should be repaired immediately or further damage may occur.
5. Pump unable to draw water from the pool - check that Valves to the Pump are fully open and that the water level is correct in the pool.
6. Blockages - Check Strainer Basket and Pool Skimmer Basket are free of obstruction. If a blockage is suspected inside the Pump or in the Pipework the advice of your pool service technician should be sought.

If the motor does not run, the problem could be that:-

1. Power not connected - Check power point by plugging in a portable appliance to ensure power is available. Also check Fuses and Main Power Supply Switch.
2. Overload tripped - Poolrite Motors incorporate an Internal Switch that will reset automatically after the Motor has cooled.
3. Blockage preventing Pump from rotating.
4. Motor fused or "burnt out" - "burning" smell evident - replacement may be required.

Warning

The Pump Motor is an electrical device and as such should not be disassembled or serviced by anyone other than an authorised Poolrite Service Technician or qualified Electrical Service Company.

This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.

Young children should be supervised to ensure that they do not play with the appliance.

Also, any other problems that cannot be corrected by routine maintenance should be attended to by an experienced Pool Service Technician.

QUIETLINE PUMP WARRANTY

In addition to the conditions of sale and warranties implied at law and which may not be excluded, Evolve Supply Chain warrants the Quietline Pump to be free from defect for a period of three (3) years (one (1) year on Mechanical Seal) from the date of purchase by the Owner from Evolve Supply Chain or an authorised supplier of the Quietline Pump.

Evolve Supply Chain will authorise a qualified technician to repair the Quietline Pump provided that:

- Evolve Supply Chain is notified within seven (7) days of the defect being detected;
- the Quietline Pump is not operated subsequent to detection of the defect;
- the Quietline Pump has not undergone any unauthorised modification or been fitted with other than genuine Poolrite approved parts; and
- the Quietline Pump has been installed and operated in accordance with the Installation Instructions and Operating Instructions, respectively.

Evolve Supply Chain will not be liable to repair the Quietline Pump if the repair is necessary because of misuse, accidental damage, entry of foreign objects or materials into the equipment, improper or inadequate maintenance or repair or incorrect operation of the Quietline Pump.

This warranty does not extend to reasonable wear and tear of the Quietline Pump.

All repairs must be undertaken by a technician authorised by Evolve Supply Chain.

The Owner will be responsible for all freight and/or travelling charges. Evolve Supply Chain accepts no responsibility for goods while in transit.

Evolve Supply Chain accepts no responsibility for representations other than as expressly contained in literature published by Evolve Supply Chain. In particular Evolve Supply Chain has made no representation as to the fitness of the Quietline Pump for any particular purpose except as contained in such literature.



Complete, detach and return to The Evolve Group

WARRANTY CARD

Name of Purchaser: _____

Address: _____

Purchased From: _____

Date: _____

Equipment and Model: _____




The Evolve Group

PO Box 3077 Clontarf, QLD Australia 4019
Phone: +61 7 3283 1196 | Fax: +61 7 3883 1560
Email: poolrite@evolvegrp.com | www.poolrite.com

Customer Record


Purchased From: _____

Purchase Date: _____

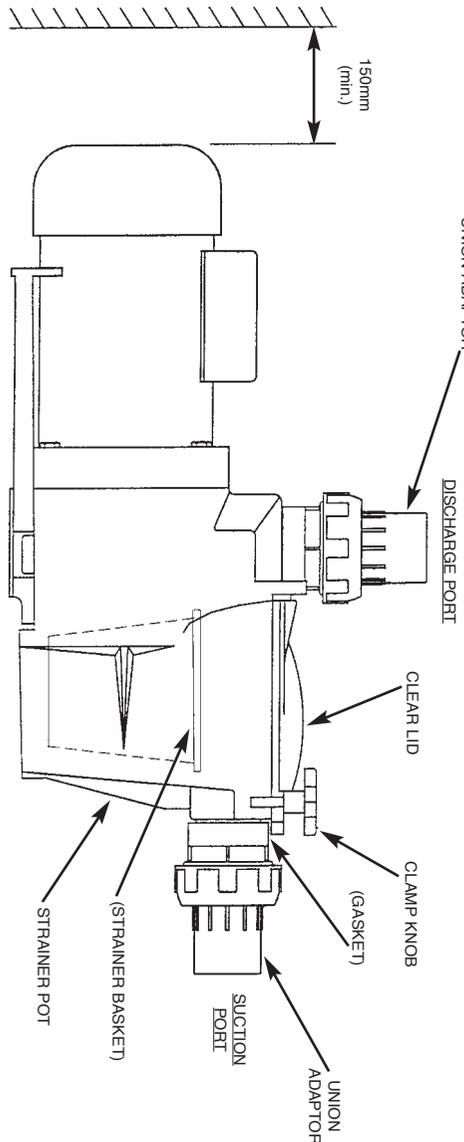

Quietline SQL Series

SWIMMING POOL PUMP

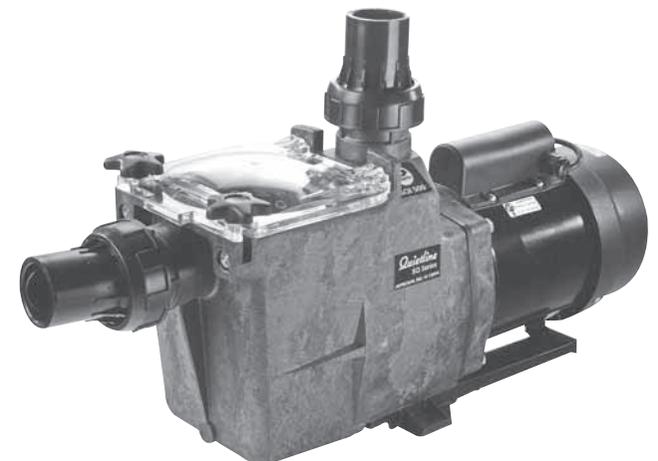

QUICK START GUIDE